

 
 
The instruction before using the device

Wi-Fi Setup Start Guide

SoftBank 601HW

Step 1 Turn on the Wi-Fi Router

Press the power button and hold it for 5 seconds.

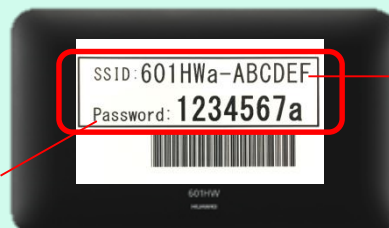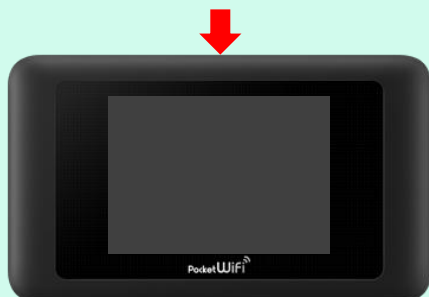

Network
Name
(SSID)

Password

The network name (SSID) and password is indicated on the back of your Wi-Fi router.



Just turn your Wi-Fi on,
and it's ready to connect!

Step 2 Connect the Wi-Fi Router to your device (PC/smartphone)

Connecting an iPhone / iPad

 
1. Tap on "Settings" icon.
2. Select "Wi-Fi".
3. Turn on "Wi-Fi".
4. Select the network "601HWa-...".
5. Enter password.
6. Done!

Connecting an Android smartphone

1. Click the "Settings" icon.
2. Turn on "Wi-Fi".
3. Select the network "601HWa-...".
4. Enter the password.
5. Done!

Connecting a Windows 10 PC

1. Click the "Network" icon on the task bar on the lower right of the screen.
2. Select "601HWa-..." from the list of the displayed wireless network.
3. Click "Connect".
4. The input screen of the network security key will be displayed. Enter the password. Then, click "Next".
5. Done!

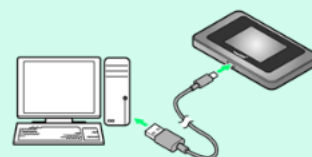

Connecting via USB

You can connect to your PC via USB.
In most cases, the driver will be installed automatically.
It differs depending on the OS of your PC.

Step 3 Done!



Data Usage

Number of Connection

Hassle Free!



* Sleep Mode

Without connecting any devices, the router will be put in sleep in 5 minutes.
To activate the router, press power button.

* Battery Life

The built-in battery lasts at least 4 hours.
An AC adapter and an USB cable are included to the rental set. You can use your power bank to re-charge in outside, too.

Wi-Fi RENTAL Store

 
Tel: +81-3-3525-8359

Email: en.info@wifi-rental-store.jp

9:30AM - 6:30PM (Weekdays Only)

* For more information,
please turn over

Menu Icons

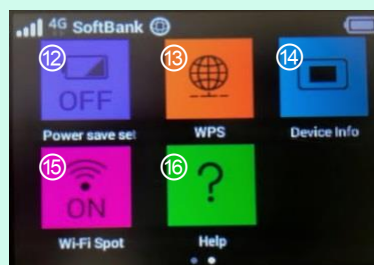

- | | | |
|----------------------|---------------------|---------------------------------------|
| ① Reception Level | ⑥ Data Usage | ⑫ Power Save Setting |
| ② Network Type | ⑦ NO. of Connection | ⑬ WPS |
| ③ Carrier Name | ⑧ Notice | ⑭ Device Info |
| ④ Connectivity | ⑨ Simple Setting | ⑮ Wi-Fi Spot |
| * Red: No Connection | ⑩ Network Name | ⑯ Help |
| ⑤ Battery Life | ⑪ Settings | * Detailed instruction on menu icons. |

Troubleshooting

“I cannot connect to the Internet”

- Please check the Wi-Fi connection on your device such as PC or smartphone.
- If your Wi-Fi is connected to your device, check the reception level on top left of the Wi-Fi. If the signal is poor, try moving to the place in good signal.
- If your problem is not be solved, try resetting your Wi-Fi router.

“The connection is unstable.” “The Internet is slow”

- The actual speed differs depending on time and locations. Please try again later.
- If monthly data usage exceeds your data plan, the data transfer speed can be slow down. Please check your data usage on the menu icon of your Wi-Fi.
- If your problem is not be solved, try resetting your Wi-Fi router.

“My Wi-Fi won’t turn on”

- The battery may run out of battery. Try re-charging your Wi-Fi at least half an hour, and hold the power button for 5 seconds.
- Try pulling out the built-in battery and replace it.
- * Detach the back cover by putting your nail on the top right of the back cover and you will see the built-in battery.

How to Reset

When something is wrong with your Wi-Fi, try resetting it. Temporary failure will be cleared.

1. Turn the router on.
2. Detach the back cover by putting your nail on the top right of the back cover.
3. Hold the reset button for 5 seconds.

* Tips after reset

- Tap on [次へ] 3 times, and tap on [利用開始].
- To set the language, select the gear mark on the screen and scroll the entries down to Language Setting.



Wi-Fi Spot

Wi-Fi Spot Service is to use public Softbank network via 601HW router. Our rental Wi-Fi router does not support this service. Please use your router with Wi-Fi Spot set off.

WEB UI

- Access to WEB UI, and change your settings in detail .
1. Connect your Wi-Fi to your PC or smartphone.
 2. Type “http://web.setting” on the URL bar of your PC.
 3. Change the website language to English
 4. Click “Log in”. The password is “admin”.